


ELEVATION

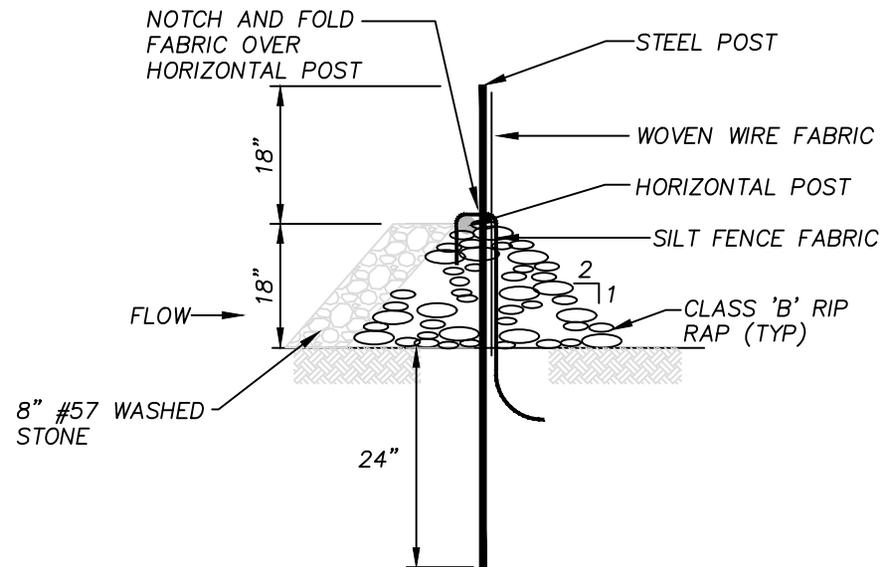

SECTION

NOTES & MAINTENANCE

1. INSTALL SILT FENCE PER STD. SILT FENCE DETAIL.
2. INSPECT REINFORCED SILT FENCE OUTLETS AT LEAST ONCE A WEEK AND AFTER EACH RAINFALL. MAKE ANY REQUIRED REPAIRS IMMEDIATELY.
3. REMOVE SEDIMENT DEPOSITS AS NECESSARY TO PROVIDE ADEQUATE STORAGE VOLUME FOR THE NEXT RAIN AND TO ENSURE STONE FILTER IS FUNCTIONING PROPERLY.
4. LOCATE REINFORCED OUTLET AT LOW POINTS OF SILT FENCE.
5. REMOVE RIP RAP STONE CAREFULLY AND ENSURE SILT FENCE IS NOT TORN. REPLACE ANY TORN SECTIONS.