


NOTES:

1) FOR MANHOLES NOT SURROUNDED BY PAVEMENT, ATTACH FRAME TO TOP OF CONE SECTION USING $\frac{5}{8}$ " X 4" WEDGE ANCHOR BOLTS, MINIMUM OF TWO W/ CONSEAL.

2) EXCEPT IN AREAS SUBJECT TO FLOODING OR RUNOFF, ALL COVERS SHALL BE VENTED W/ (2) 1" HOLES.

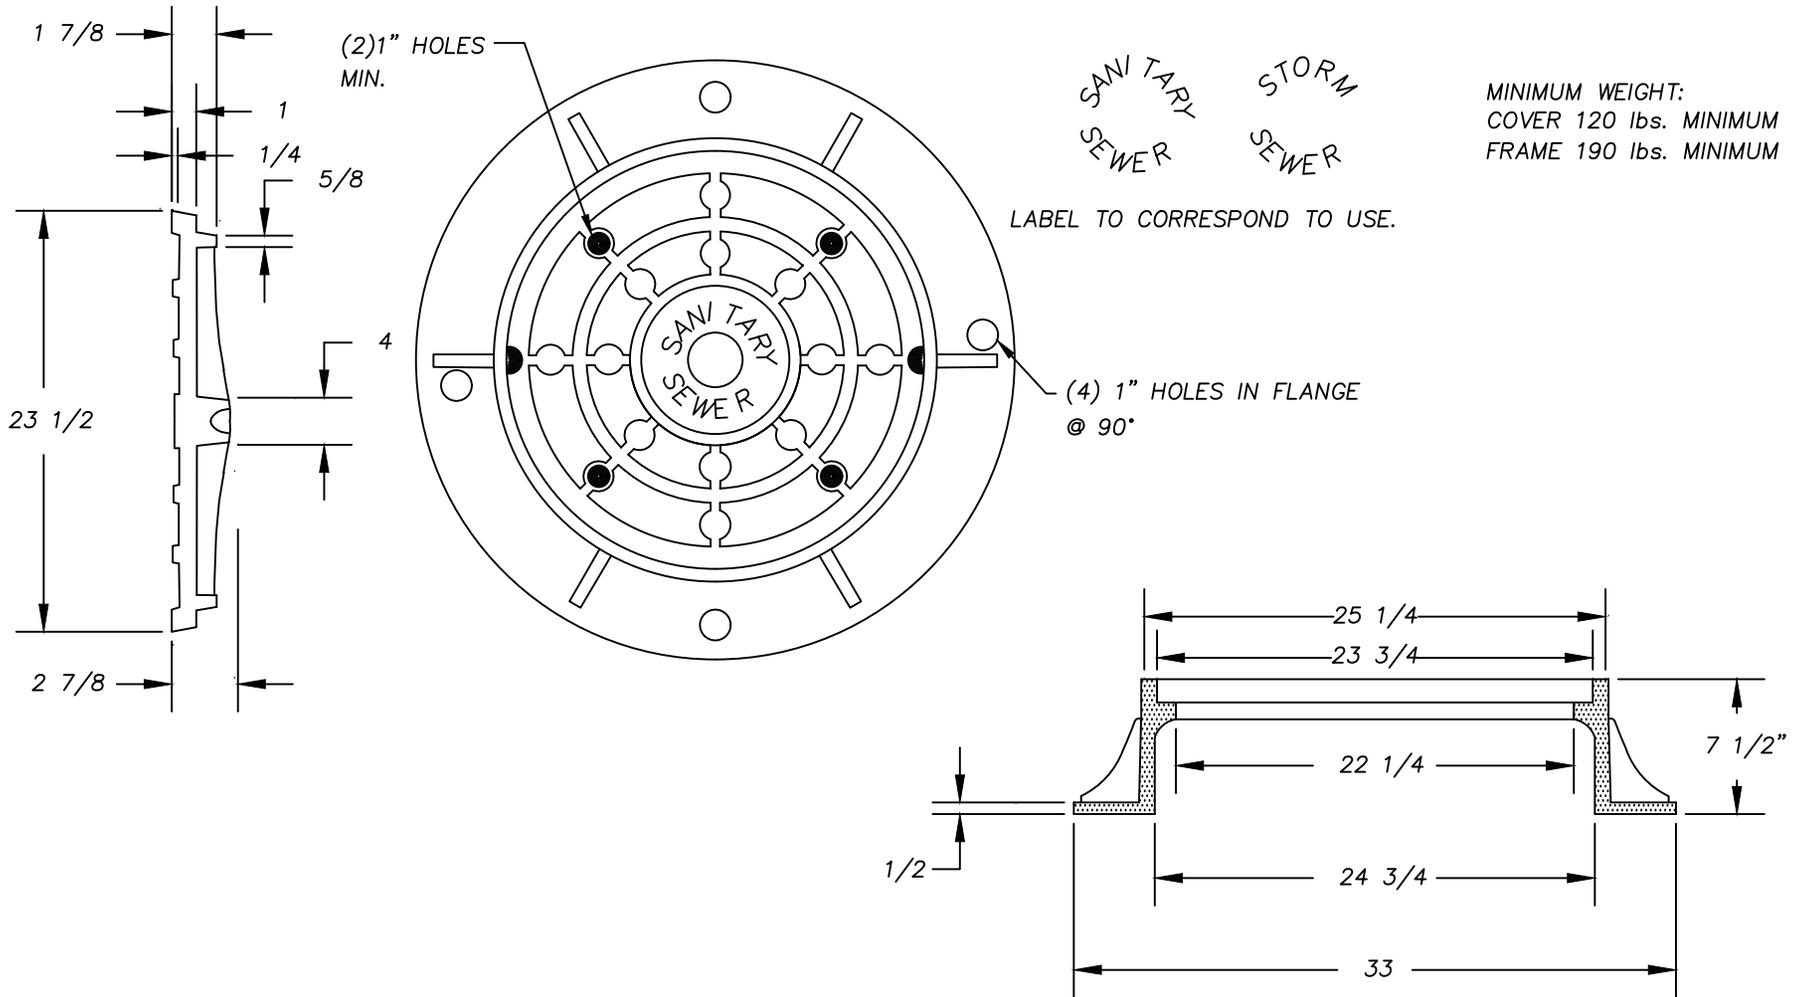

NOT TO SCALE
DATE: OCTOBER 2020

MEASUREMENTS IN INCHES